

Reset Flow Meter

Press Square button "Green"

Settings

5. Initialize

Initialize All

Yes

English

Vertical

Set Date Time

Connection Sensors

Flow Direction

Pipe Size

Pipe Material

Set and Continue

Flow Unit

Temperature Unit

Set and Continue

PNP/NPN

Set and Continue

Set

Complete initial settings?

Center Button "Blue"

Set (Center Button "Blue")

Execute (Center Button "Blue")

Execute (Center Button "Blue")

Set (Center Button "Blue")

Set (Center Button "Blue")

Set (Center Button "Blue")

Set (Center Button "Blue")

to the Left

3/4"

Resin

Set (Center Button "Blue")

G/min

F

Set (Center Button "Blue")

PNP

Set (Center Button "Blue")

Select (Center Button "Blue")

Set (Center Button "Blue")

