

Reset Flow Meter

Press Square button "Green"

Settings

5. Initialize

Initialize All

Yes

English

Vertical

Set Date Time

Connection Sensors

Flow Direction

Pipe Size (check pipe size)

Pipe Size (check pipe size)

Pipe Material

Set and Continue

Flow Unit

Temperature Unit

Set and Continue

PNP/NPN

Set and Continue

Set

Complete initial settings?

Menu

Settings

I/O Settings

ch1: output flow

Target

>>Flow rate

Detection Mode

>>Pulse Output

Logic

>>N.O.

Pulse weight

>>000.02

Back

Back

Back

Menu

Center Button "Blue"

Set (Center Button "Blue")

Execute (Center Button "Blue")

Execute (Center Button "Blue")

Set (Center Button "Blue")

Set (Center Button "Blue")

Set (Center Button "Blue")

Set (Center Button "Blue")

to the Left

3/4"

1/2"

Resin

Set (Center Button "Blue")

G/min

F

Set (Center Button "Blue")

PNP

Set (Center Button "Blue")

Select (Center Button "Blue")

Set (Center Button "Blue")

"Green"

Select (Center Button "Blue")

Select (Center Button "Blue")

Select (Center Button "Blue")

Down Arrow (Bottom "Blue")

Select (Center Button "Blue")

Down Arrow (Bottom "Blue")

Select (Center Button "Blue")

Down Arrow (Bottom "Blue")

Select (Center Button "Blue")

Down Arrow (Bottom "Blue")

Select (Center Button "Blue")

Left Arrow ("Blue")

Left Arrow ("Blue")

Left Arrow ("Blue")

"Green"

